

Elna 8007

Supplementary instructions

elna
+SWISS DESIGN


Dear Elna Customer:

Continuing Elna's tradition for updating and revising our exceptional product line, we are pleased to announce the following new features and stitches available on your new 8007 sewing machine.

Please use the 8006 instruction manual to understand your machine's functions. The operation of your machine has not changed, but includes these additional features.


NEW The LCD panel now has a backlight for clearer visibility.

NEW A needle thread sensor has been added. This screen will appear if the needle thread breaks while embroidering:

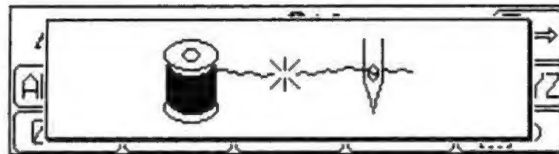

Refer to page 48 of your instruction manual for rethreading instructions. It is no longer necessary to press the Start/**STOP** key after the thread breaks. The sensor will stop the machine automatically.

NEW An electronic speed reducer lever.

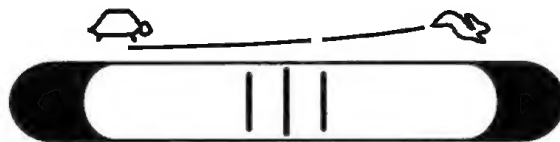

To increase sewing speed, slide the lever to the right. To decrease sewing speed, slide the lever to the left.

NEW The Start/Stop key may now be used for all sewing modes. You must disconnect the foot control to use the Start/Stop key. The machine begins running slowly and will then run at the speed set with the electronic speed reducer lever.

This replaces the information regarding the Start/Stop key found on page 9 of your instruction manual.

NEW The stitch package has been expanded – see new stitch package illustrations on following page.


8006


18 utility and decorative stitches
3 buttonholes

8007

65 utility and decorative stitches
5 buttonholes

8007 Stitch #	Corresponds to 8006 Stitch #	Found in Instruction Manual on Page #
1	1	19-23
4	3	24
5	4	25-28
6	5	28
8	6	28
9	9	30
11	7	29
12	8	29
14	2	24
15	12	31-35
17	14	31-34
19	13	31-34
22	11	31
26	10	30, Buttonhole Applique
27	10	30, Parisian Hemstitch
29	15	36
41	16	36-37
43	18	37
44	19	37
45	20	37
49	21	38
57	17	37, 38

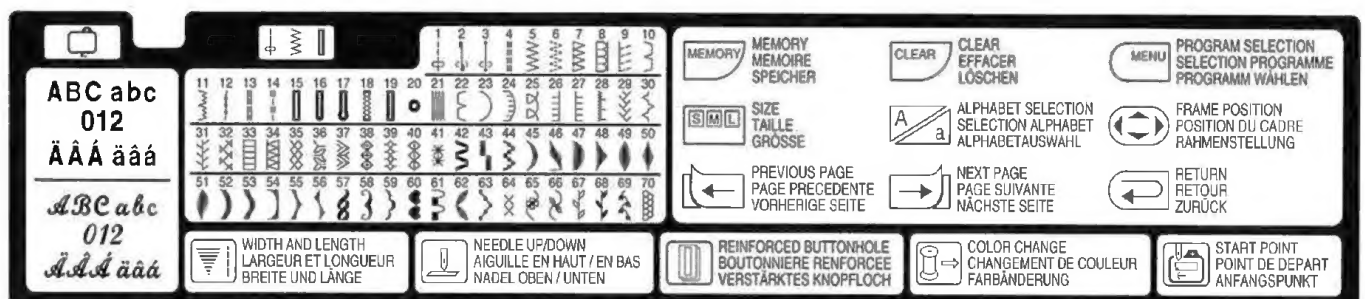

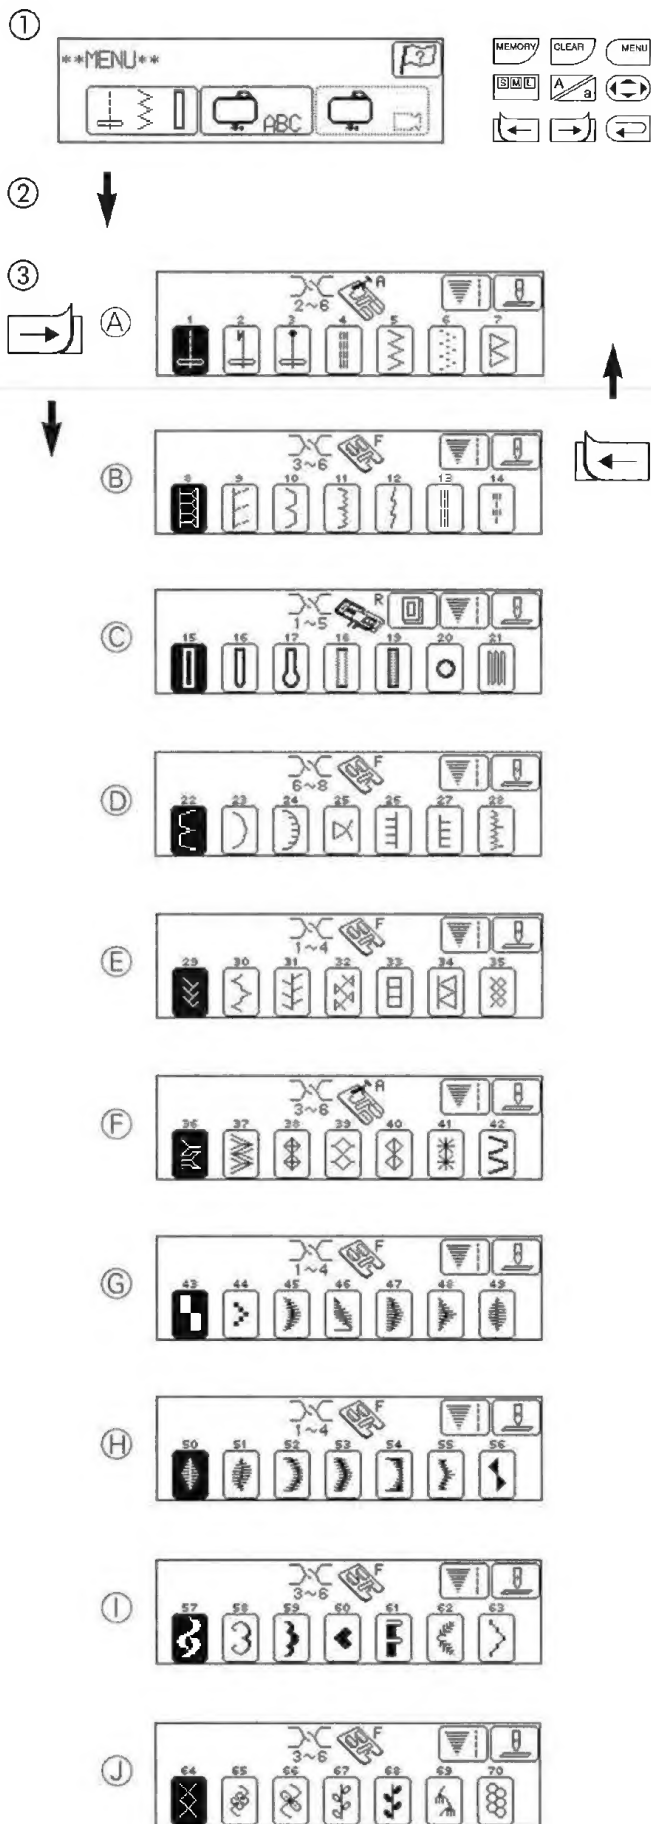

Traditional Sewing

• How to scroll the display screen

- ① When you turn on the power switch, the MENU screen is displayed.
- ② Press key.
The display screen shows ①.
- ③ Press the key to scroll through screens ② to ⑩.
(To return to a previous screen, press the key.)

- ④ Press the key to scroll directly from screen ⑩ to ①.
Press the key to scroll directly from screen ① to ⑩.

*Press the or key to return to the MENU screen.

This replaces the information regarding «How to select traditional sewing mode» found on page 18 of your instruction manual.